

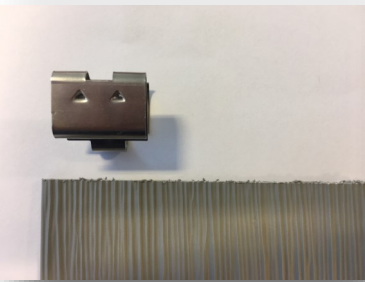


Method #1 Siding Clips


(Preferred)

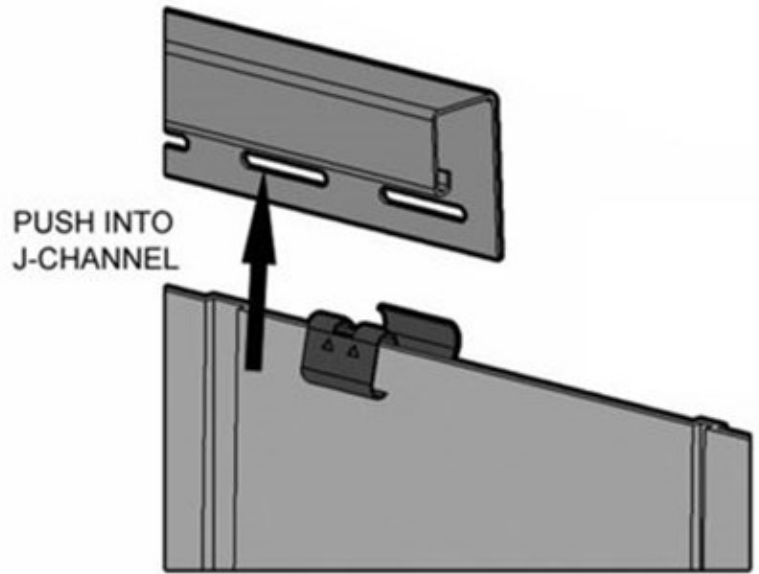


Siding clips work with all of our siding profiles. Use when the siding top lock needs to be removed*. Siding clips easily snap into 3/4" J-channel to retain panels.

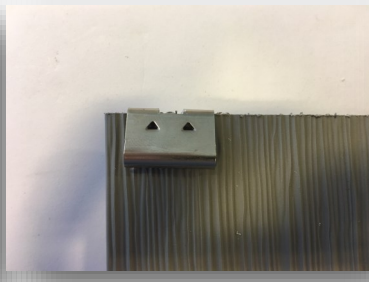

Install clips on the top of the panel
Recommended install is 16" spacing.
(Max spacing 24" – At least four per full panel)

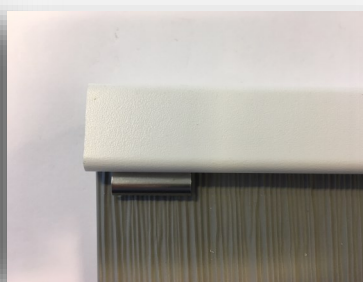

Push panel with clips into j-channel.

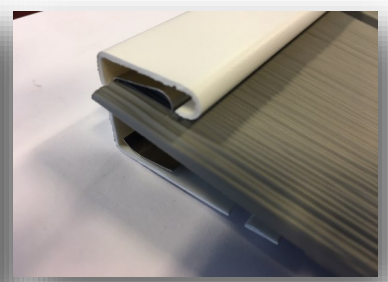

Clip installed in j-channel.

*Note: For cutting the panel to the right height see our installation instructions page 10.

Installation Instructions Top Row of Siding

Method #2 Finish Trim



1. Use a finish trim under windows or at the top row of siding.
2. Cut the siding to allow a $\frac{1}{4}$ "gap for expansion (when installed inside the finish trim).
3. Use a snap lock punch, $\frac{1}{4}$ inch from the cut edge of the panel to raise tab faces on the outside of the panel.
4. Tabs should be raised every 6 inches.
5. Push siding up into the trim so that punched tabs will keep the panels in place.

Method #3 2-Piece Retaining System



1. For the top course use a two-piece retaining system.
2. Install a cornice receiver.
3. Using a nail slot punch, punch slots in the panel $\frac{1}{4}$ "from the cut edge for nailing. The panels should be nailed 16" apart and should not be nailed tight.
4. Snap the cornice molding into the receiver to cover nails.